

MAC SPORTS FOLDING WAGON WITH BRAKES

Quick-use guide | Costco item #1654593 | Collapsible utility wagon

At a glance

A folding utility wagon for transporting groceries, outdoor gear, garden supplies, and similar cargo. Listed features include a steel folding frame, all-terrain wheels, adjustable pull handle, brakes, a zip-open rear panel, and an interior pocket.

Open and set up

- Set the folded wagon on level ground. Release any storage strap or cover, if fitted.
- Pull the frame open and spread the sides fully. Press the wagon floor down into its normal flat position.
- Extend or position the handle to a comfortable height; confirm it is secure before moving.
- Check that the fabric, wheels, and frame are fully opened and clear of obstructions.

Load and move

- Distribute cargo evenly with heavier items low and centered. Stay within the load limit marked on the wagon or its original documentation.
- Release the wheel brakes before moving. Pull using the handle at a controlled walking pace.
- Engage the brakes when parked; test that the wagon stays stationary. Do not rely on brakes to hold a load on a slope.
- The rear panel can unzip to allow longer cargo to extend beyond the basket. Secure oversized items separately so they cannot slip or tip.

Fold for storage

- Unload completely and remove loose items. Return any open rear panel to its closed position.
- Release the floor and draw the wagon frame inward using its folding mechanism; keep fingers away from moving joints.
- Lower the handle and fasten a storage strap or cover, if included. Store dry, upright or in a stable position.

Safety and care

- For cargo only: do not transport children or pets. Do not ride in the wagon or use it as a step.
- Keep hands clear of hinges and folding joints. Avoid steep slopes, stairs, and unstable ground.
- Wipe the frame and fabric with a damp cloth and mild soap as needed. Dry thoroughly before folding or storage.
- Periodically check brakes, fasteners, frame joints, wheels, and fabric for wear or damage.

Quick troubleshooting

- **Hard to roll:** Check that brakes are released and wheels are clear of debris; reduce or rebalance the load.
- **Will not fold:** Remove cargo, check for trapped fabric or objects, and align the frame. Do not force it.
- **Brake does not hold:** Move to flat ground and check the brake mechanism for debris or damage. Stop using the wagon if the brake is faulty.

Manufacturer support

MACSPORTS | macsports.com | service@macsports.com