

MAC SPORTS | DELUXE EXTENDED FOLDING WAGON

QUICK-USE GUIDE | Model WTCXXL-400 | Costco item 1815317

MAXIMUM CARGO LOAD	OPEN SIZE (D x W x H)	FOLDED SIZE (D x W x H)
350 lb (159 kg)	52.7 x 21.6 x 22.7 in	21.6 x 8.2 x 29.5 in

GETTING STARTED

- No assembly required. Place the folded wagon on level ground, release any storage restraint, and gently spread the frame open until fully extended.
- Check that the fabric floor is seated, wheels roll freely, and the frame is fully open before loading.

USING THE WAGON

- Handle: Extend the telescoping pull handle and engage its locking mechanism. Adjust or retract it only when the mechanism is released.
- Brakes: Use the built-in wheel brakes to help hold the wagon in place while parked; release them before pulling. Check that the brakes hold before leaving the wagon unattended.
- Loading: Distribute cargo evenly across the floor; keep heavier items low. Do not exceed 350 lb of cargo. The extended compartment accommodates longer gear such as folding chairs.

FOLDING & STORAGE

- Unload completely, park on level ground, and retract the telescoping handle.
- Lift the center of the wagon floor using its folding pull point, if present; guide the frame inward without forcing hinges or trapping fabric. Secure any attached storage strap or restraint.
- Store folded and upright in a dry location. Allow wet fabric to dry before prolonged storage.

IMPORTANT SAFETY & CARE

- For carrying cargo, not passengers. Do not transport children or pets in the wagon.
- Keep fingers clear of hinges and moving joints. Do not use on steep slopes or allow the loaded wagon to roll freely.
- Clean fabric and frame with a damp cloth and mild soap as needed. Dry thoroughly; remove dirt from wheel axles and check for loose or damaged parts.

QUICK TROUBLESHOOTING

- Will not open/fold: Remove cargo; check for a caught fabric panel, storage restraint, or obstruction in the folding frame. Do not force it.
- Hard to pull: Confirm brakes are released, wheels are free of debris, and load is balanced.
- Handle will not stay extended: Retract and extend again, ensuring the lock engages; discontinue use if damaged.

PRODUCT SUPPORT & SOURCE

Mac Sports: service@macsports.com | macsports.com | (800) 938-9886

Specifications: Costco product 4000251794. Confirm model number on the wagon label when requesting parts.