

ELEMENTS BUG REPELLING FAN

Quick Instructions - Model 5330250

Single-fan guide | Rechargeable | Indoor and limited outdoor use

PRODUCT BASICS

Size	3.2 in L x 3.2 in W x 9.4 in H	Battery	Rechargeable 3.7V lithium
Charge time	About 4 hours	Runtime	Up to 10 hours per full charge

1 CHARGE BEFORE USE

Connect a **USB-C charging cable** to the fan, then connect the cable to a suitable USB power source. A full charge takes about 4 hours.

2 PLACE AND OPERATE

- Place the fan upright on a stable, flat surface near food or drinks, or use the built-in hook to hang it securely above the area.
- Turn the fan on using its power control. The soft holographic fins rotate to help deter flies and other flying insects.
- For a larger table, position the fan close to the food or serving area you want to protect.

3 SOFT-TOUCH FINS

The flexible fins are designed to stop when they contact a hand or other object. Keep the rotation area clear for best performance; do not intentionally hold or obstruct the fins while the fan is running.

4 CARE & SAFETY

- Use indoors or in limited outdoor settings only.
- Do not leave the fan outdoors in rain or severe weather.
- Keep the fan and charging port dry while charging.
- Wipe with a soft, slightly damp cloth; do not immerse in water.
- Disconnect charging power before cleaning.
- Stop using the fan if the housing, battery, cable, or charging port appears damaged.

QUICK TROUBLESHOOTING

Fan does not start	Recharge fully, then try the power control again.
Fins stop during use	Remove any obstruction; the soft fins are designed to stop on contact.
Short runtime	Recharge for about 4 hours. Runtime may be less than the stated maximum depending on battery condition and use.