

over&back; 3-Piece Multipurpose Berry Baskets

Quick-Use Guide | Costco Item 2033994

Material	Stoneware	Set	3 pieces
Large basket	7.4" L x 7.4" W x 3.7" H	Medium baskets	2 baskets, each 5.8" L x 5.8" W x 2.8" H
Cleaning	Dishwasher safe	Heating	Microwave safe

Before First Use

- Remove all packaging and inspect each basket for visible damage.
- Wash before use. The baskets are dishwasher safe.

Basic Use

- Use the baskets to hold, rinse, drain, serve, or display berries and other small foods.
- For rinsing: place produce in the basket, rinse with clean water, and allow excess water to drain through the slotted sides.
- The baskets may also be used for countertop or table organization and serving.

Microwave & Dishwasher

- The manufacturer/retailer listing identifies the stoneware baskets as microwave safe and dishwasher safe.
- When removing stoneware from a microwave, use normal care because the basket or food may be hot.

Care & Storage

- Clean after use and allow the basket to dry before storing.
- Keep the drainage slots free of food residue so water can pass through easily.
- Stoneware can chip or crack if dropped or struck; inspect before reuse if damaged.

Simple Troubleshooting

- **Water drains slowly:** Check that the slots are clear, then rinse away any residue.
- **Basket is chipped or cracked:** Stop using it for food service and replace it.

Manufacturer Support

over&back;; 1-800-234-9088

Unofficial quick-use guide prepared from available product information; not the manufacturer's original manual.